





<b>A</b>	
Accelerator/Decelerator Pedal	6-11, 8-9
Accumulator Maintenance Precautions	4-19
Accumulators Safety Sign	3-5
Accumulator Shut-off Handles	6-18
Air Cleaner	7-8
Air Cleaner Service Indicator	6-12, 7-8, 14-6
Air Conditioner	6-16
Air Conditioner Unit Precautions	4-22
Air Filter Elements	14-6
Air Intake Hood	14-6
All Wheel Drive	7-23, 11-9, 12-1
All Wheel Drive Safety Precautions	4-24, 12-5
Articulation	8-31, 8-28, 10-7
Articulation Hinge Safety Sign	3-10
Articulation Indicator	6-14, 10-7
Articulation Lock Pins	4-13, 8-28, 8-31, 9-10, 10-7, 11-8
Articulation Switch	8-28, 9-10
Attachments	13-1
Attachment Control Switches	6-11, 13-18
Attachment Selector Valve	6-12, 9-9
Attachments Weights	11-16
<b>B</b>	
Batteries	7-24
Battery Isolation Switch(es)	6-15, 7-12, 11-13
Batteries - Jumper Cable Procedure	14-21
Battery Maintenance Precautions	4-20
Battery Problems	14-20
Batteries Safety Sign	3-12, 3-13
Bearings	14-11
Belts Safety Sign	3-15
Brake Fluid	3-16, 7-21, 7-22, 14-18, 14-27
Brake Function Check	8-18
Brake Pedal	6-11
Brakes	3-17, 8-16, 8-17
Brake Warning Light and Alarm	6-11
Brake Warning System Check	7-16
Blade Lift Levers	9-5
Blade Lift Stirrup Nuts	14-12

**C**

Cab Entry and Exit	8-5
Capacities - Cooling System	14-20
Changing Directions	8-27
Changing Gears	8-27
Circle Adjustment	7-26
Circle Lubrication	14-11
Circle Shift Cylinder	9-15
Circle Shift Lever	9-7
Circle Turn Lever	9-7
Circuit Breakers	6-7, 6-8
Clutch Fluid Level	7-22, 14-27
Clutch Free Play	7-25
Clutch Pedal	6-11, 8-25
Cold Start	8-12
Cold Start Precautions	4-21
Cold Start Switch	6-6, 8-12
Cold Weather Operation	14-29
Cold Weather Start Up Procedure	8-11, 14-29
Console	6-6

Controls and Instruments	6-1, 12-9
Control Levers	6-5, 6-6, 6-12, 8-21, 8-28, 12-9
Controls Operation	9-1
Control Switches - Attachments	6-11
Coolant Safety Sign	3-14
Cooling System	14-18
Cooling System Capacities	14-20
Customer Access Numbers	ii

**D**

Defroster Fan Switch	6-6
Differential	8-32
Dimensions	11-15
Dimmer Switch	6-11
Dismounting Precautions	4-7
Dozer Blade	13-13
Dozer Blade Control Lever	9-9
Driving the Grader	8-1
Driving the Grader - Starting Out	8-25
Driveshaft Safety Sign	3-15

**E**

Electric Float Valves	9-28
Engine Air Filter Elements	14-6
Engine Coolant	7-6
Engine Cooling System	14-18
Engine Oil	7-5
Engine Oil Pressure Gauge	8-14
Engine Serial Number Location	5-8
Engine Shut Down	8-11
Engine Start and Shut Down	8-10
Engine Temperature Gauge	8-15
Engine Warning System	8-13
Error Codes	8-23
Ether - Cold Start Precautions	4-21
<b>F</b>	
Fan Blade Safety Sign	3-15
Fan Speed Control	6-16
Fan Switch - Defroster	6-6
Filters	14-6, 14-9, 14-10
Final Drives	8-32

Final Drives - Oil Level	7-17, 7-18
Final Drive Serial Number Location	5-7
Fire Precautions	4-14
Fixed Point Blade Lift System	9-12
Float Valves	9-28
Fluids	3-16, 7-21, 7-22, 14-18, 14-27
Front Wheel Bearings	14-11
Front Wheel Lean	8-28, 8-30
Front Wheel Lean Lever	9-8
Fuel Level Gauge	6-6, 8-16
Fuel Handling Precautions	4-23
Fuel Shut Off Valve	7-9
Fuel Tank	7-9
Fuel Tank Drain Valve	7-9
Fuse	12-12

**G**

Gauges	6-5, 6-6, 6-15, 8-14
General Operating Precautions	4-10
General Maintenance Precautions	4-14
Grader Orientation	2-1

Grader Serial Number Identification	5-6
Grader Serial Number Location	5-5
Grease Fittings	14-10, 14-24

**H**

Hand Brake	6-12, 7-16, 7-25, 8-19, 11-7, 14-14
Hand Brake Cable and Caliper Adjustments	14-14
Hand Throttle	6-14, 8-9, 9-11
Handholds Safety Instructions	3-7
Hazard Alerts	1-1
Hazard Lights	11-8, 11-11
Headlight Dimmer Switch	6-11
Heater Control Lever	6-13
Heater Blower Switch	6-6
Heater Vents	6-13
Hi-Lift	9-12, 9-18
Hi-Lift Arm Lock Cylinder Lever	9-8
Horn Button	6-6
Hour Meter	6-15
Hydraulic Oil Level	7-7

Hydraulic System Filter Element and Indicator	14-9
Hydraulic System Maintenance Precautions	4-18

**I**

Ignition Switch	6-6, 8-12
Indicator Lights	6-5

**J**

Job Site Precautions	4-12
Jumper Cable Procedure - Batteries	14-21

**L**

Levers	6-5, 6-12, 6-13, 12-10
Levers - Controls Operation	9-1
Lights	6-5, 7-13, 8-24, 12-11, 12-12, 12-13
Light Switches	6-6
'Limp-home'	8-24
Lock/Unlock Differential	8-32, 10-7
Lubricants	14-24
Lubrication	14-1
Lubrication Points	14-24
Lubrication Specifications	14-26

# INDEX

15-7

## M

Maintenance and Lubrication	14-1
Maintenance Precautions	4-14
Manual Override Knob	6-17
Microprocessor Status Light	8-24
Modifications	iv
Moldboard	10-6
Moldboard Hi-Lift	9-12, 9-18
Moldboard Safety Sign	3-6
Moldboard Slide Shift Lever	9-6
Moldboard Tilt Lever	9-5
Mounting and Dismounting Precautions	4-7
Moveable Point Blade Lift System	9-18

## N

Night Operation Precautions	4-13
-----------------------------	------

## O

Oil Cooler	7-13, 12-6
Oil Pressure Gauge	6-6, 8-14
One Way Plow	13-15
Operator - General Precautions	4-5

Operator's Manual Safety Sign	ii, 3-8, 4-5
Operating Precautions	4-10
Operating Techniques	10-1
Operating the Controls	9-1

## P

Pedals	6-11, 8-9
Pedestal	6-5, 8-9
Personnel Precautions	4-5
Planetary Hubs	12-8
Plows	13-14, 13-15, 13-18
Precautions - Safety	4-1
Pre-start Checks	7-1
Pump Drive Gearbox Oil Level	7-23, 12-8

## R

Radiator	7-13, 14-18
Radiator Safety Sign	3-14, 3-15
Radiator Shutter Operation	6-17
Ripper	10-20, 10-21, 13-7
Roading the Grader Precautions	4-12

**S**

Safety Instructions	1-3, 3-7
Safety Precautions	4-1
Safety Signs	3-1, 7-13
Safety Sign Locations	3-1
Scarifier	10-20, 13-5
Scarifier Control Lever	9-9
Seat Adjustments	8-5, 8-6
Seat Belt	8-8
Seat Belt Safety Sign	3-9
Selector Valve	6-12, 9-9
Serial Number Locations	5-1
Service Brakes	8-16
Service Position	14-5
Shut-down Position	7-5, 7-17
Snowplow Control Lever	9-9
Snow Wings	13-18
Snow Removal Precautions	4-13
Specifications	11-15, 14-26
Special Hazards Precautions	4-1

Start Code Sequence	8-22
Starter Safety Sign	3-11
Starting Precautions	4-8
Starting the Grader	8-10
Steering	8-28, 8-29, 8-30
Stopping Precautions	4-10
Stopping the Grader	8-26
Supplemental Steering System	7-15, 8-29
Supplemental Steering Check	8-29
Switches	6-5, 6-6, 6-11, 6-15, 9-28, 10-7
Symbol Chart - Controls and Instruments	6-9, 6-10

**T**

Tachometer	6-5
Tandem Oil Level	7-19
Tandem Oil Level - Drum Brakes	7-19
Tandem Oil Level - Oil Disc Brakes	7-20
Temperature Control Lever - Heater	6-13
Temperature Gauge	6-6
Thermostat Control	6-16
Tire Inflation	7-11, 14-12



Tire Maintenance Precautions	4-19	<b>V</b>	
Tire Pressures Chart	14-13	Vacuator Valve	7-8
Toolbox	6-18, 14-23	Voltmeter	6-6, 8-14, 8-15
Towing	11-1, 11-5	V-Plow	13-14
Towing Precautions	4-24	<b>W</b>	
Transmission	8-20	Walk-around Inspection	7-14
Transmission Controller	8-21	Warning Lights and Alarms	6-6, 6-11, 7-13, 12-9, 12-12
Transmission Control Levers	6-6, 11-6, 11-12	Weights	11-15, 11-16
Transmission Display	8-22	Windrow Eliminator	13-9
Transmission Error Codes	8-23	Windshield Release	6-12
Transmission Filter Element	14-10	Windshield Washer Switch	6-6
Transmission Lubricants - Cold Weather Operation	14-29	Windshield Wiper Switches	6-6
Transmission Oil Level	7-10	Wings	13-18
Transmission Serial Number Location	5-7	Winter Air Intake Hood	14-6
Transporting	11-1, 11-10		
Transporting Precautions	4-24		

## Champion Technical Manuals

Additional technical publications available from your Champion distributor are:

Champion Shop Manual .....	L-2005
Champion ALL WHEEL DRIVE Service Guide .....	L-2010
Cummins B Series Engine Operation and Maintenance Manual .....	L-14004
Cummins C Series Engine Operation and Maintenance Manual .....	L-14008
Cummins L-10 Engine Operation and Maintenance Manual .....	L-14005
Cummins B Series Engine Troubleshooting and Repair Manual .....	L-14006
Cummins C Series Engine Troubleshooting and Repair Manual .....	L-14009
Cummins L-10 Engine Troubleshooting and Repair Manual .....	L-14010
Cummins B Series Engine Shop Manual .....	L-14011
Cummins C Series Engine Shop Manual .....	L-14012
Cummins L-10 Engine Rebuild Manual .....	L-14007
 Champion Parts Manual .....	 L-3008
Cummins B Series Engine Parts Catalog .....	L-13004
Cummins C Series Engine Parts Catalog .....	L-13005
Cummins L-10 Engine Parts Catalog .....	L-13002
 Champion Service Training Manual .....	 L-5003
CIMA Motor Grader Safety Manual .....	L-1005
Champion Preventive Maintenance Checklist 0 - 5000 Hours .....	L-2008
Champion Glass Specification Manual .....	L-1000

See your Champion distributor for a complete listing of Champion Service Videos.